

## Paterson Series Bathroom Accessories

### Material Specifications


- #304 Stainless Steel
- Polished Stainless Steel Finish

### Dimensions

**ML6048PSS** Single Toilet Roll Holder – 145mmW x 90mmH x

85mmD 

**ML6049PSS** Double Toilet Roll Holder – 300mmW x 20mmH

x 85mmD 

**ML6056PSS** Single Towel Bar – 620mmW x 20mmH x 95mmD (600mm C to C)

**ML6060PSS** Single Towel Bar – 770mmW x 20mmH x 95mmD (750mm C to C)

**ML6064PSS** Double Towel Bar – 620mmW x 20mmH x 145mmD (600mm C to C)

**ML6068PSS** Double Towel Bar – 70mmW x 20mmH x 145mmD (750mm C to C)


**ML6074PSS** Soap Dish – 180mmW x 20mmH x 95mmD


**ML6078PSS** Shelf – 320mmW x 20mmH x 95mmD (300mm C to C)


**ML6080PSS** Shelf – 470mmW x 20mmH x 95mmD (450mm C to C)

**ML6082PSS** Combined Shelf & Soap Dish – 320mmW x 20mmH x 95mmD (300mm C to C)

**ML6084PSS** Combined Shelf & Soap Dish – 470mmW x 20mmH x 95mmD (450mm C to C)

**ML6086PSS** Robe Hook – 48mmD x 20mmD 

**ML6090PSS** Towel Ring – 180mmH x 85mmD x 165mmD 

**ML6094PSS** Dress Trim – 5mmD x 32mmD 

### Installation Guidelines

1. Loosen Grub Screw (B) with Hex Key (C) from Mounting Support (A) and remove Ferrule (E).
  2. Mark mounting position for single Mounting Support.
  3. **Note:** For dual Mounting Support application, ensure that height positions are parallel and Centre to Centre measurements.
  4. Drill hole(s) in marked position(s). Insert Hard Wall Anchor (F) or another suitable fastener appropriate to the wall being affixed to.
- **Note:** Use Optional Dress Trim (G) for soft wall fixture.



ML6048



ML6050



ML6049



ML6056 / ML6060



ML6064 / ML6068



ML6074



ML6078 / ML6080



ML6082 / ML6084



ML6086



ML6090




ML6094



This product is AS1428.1 compliant (accessible compliant) when installed in accordance with the guidelines.

The photographs and line drawings of the products presented above are representational only.  
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.

5. Insert Screw (D) into Ferrule (E) and tighten Screw (D) into Anchor (F) so that Ferrule (E) is secure to wall.
6. Position Mounting Support (A) and push onto Ferrule (E).
- **Note:** For dual Mounting Support application ensure that unit is parallel.
7. Secure unit by tightening Grub Screw (B).

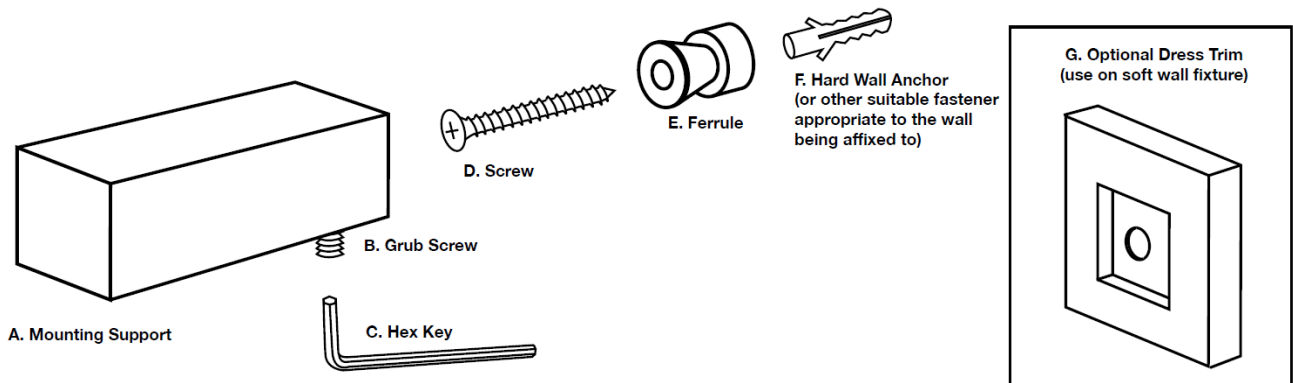

*The technical recommendations contained in this document are necessarily of a general nature and should not be relied on for specific applications without first securing competent advice. Whilst Metlam Australia Pty Ltd has taken all reasonable steps to ensure the information contained herein is accurate and current, it does not warrant the accuracy or completeness of the information and does not accept liability for errors or omissions. Any Commercial product should only be installed by a competent tradesperson and serviced/maintained by knowledgeable janitorial staff or competent people. Metlam Australia accepts no responsibility for any damage to product, walls or fixtures due to incorrect installation or maintenance of any of their products*

The photographs and line drawings of the products presented above are representational only.  
Metlam Australia Pty Ltd reserves the right to, and from time to time, make changes and improvements in design and dimensions.